

9.0 End of Line Monitoring

An End of Line monitoring Diode or an End of Line monitoring Resistor can be connected across the 24v+ and 0 terminals. Resistor values for the End of Line will be determined by the customer, with a minimum resistance value of 1.2k ohms.

10.0 Maintenance

Little or no maintenance is required during the normal working life of the product. The 'Stainless Steel' enclosure is resistant to most acids, alkalis and chemicals and has been designed to withstand severe weather conditions. However it is suggested that to avoid the possibility of a potential electrostatic charge build up, the exterior of the product is periodically wiped down with a clean damp cloth. At this point a visual inspection is recommended to ensure that the product is in good working order and no damage has been sustained during its normal operation.

11.0 Conditions for Safety Use

i) This apparatus is suitable to be used only in ambient temperature as stated below:

Type	Ambient Temp
SL125	-40°C to +70°C

ii) Do not paint or change the surface finish of the unit. The coating applied by the manufacturer is Anti Static & UV Stable.

Specific Condition of Use

Repairs of the flameproof joints must be made in compliance with the structural specifications provided by the manufacturer. Repairs must not be made on the basis of values specified in tables 1 and 2 of EN/IEC 60079-1".

Contact Moflash Signalling Ltd for further information.



INSTALLATION & TECHNICAL INFORMATION

PLEASE READ PRIOR TO INSTALLATION



SL125 Status Lights Series - Stainless Steel

(Ex d Combination Units with Optional Activation Control)

VISUAL COMBINATION SIGNALLING DEVICES

APPROVALS AND
CONFORMITIES



Moflash part code S00529 Issue 4

Website: www.moflash.com

Email: technical@moflash.co.uk

1.0 Introduction

The SL125 status light range is certified for use and installation in Zone 1 and Zone 2 areas with gases groups of IIA, IIB, IIC also Zones 21 and 22 for dust. The unit carries a temperature classification T4~T6. It especially applies to Oil & Gas, Offshore Platform, Chemical, Petrochemical, Refinery and Marine Industries etc. Enclosure material is Stainless Steel.

The lights are available in either LED type, which offer three primary modes of operation: flashing, rotating or steady on or Xenon type offering flashing modes. The Push Button or Junction Box are optional additions. In whatever configuration is supplied all internal connecting glands & external blanking plugs are fitted. Note: any external cable connecting glands are not. The multiple construction is mounted on a stainless steel SS316 mounting plate ready for installation.

2.0 Explosion Proof Labelling

All products have a rating label with the following important information:
Product order no: eg SL1252JARL05DCNNNARDN
(Refer to the datasheet for product order selection)

Input voltage: 12-48v DC or 100-240v AC (50/60 Hz)
Beacon: $\leq 25W$

Code: Ex d IIC T4~ T6 Gb,
Ex tb IIIC T135°C~T85°C IP66

ATEX Certificate No: Presafe 15 ATEX 6936X

ATEX Mark: 

IECEX Certificate: IECEX PRE 15.0058X

Gas Group and Category: II 2GD

CE Mark: Mark No: 0891

Warning: **DO NOT OPEN WHEN AN EXPLOSIVE GAS ATMOSPHERE IS PRESENT**

Finished product serial no (Include date of construction): ie.08-0001, Year - 08,
product serial no: - 0001.

8.0 Cable Gland

The SL125 series product has three cable gland entries. Only cable glands approved for Ex d applications can be used with Moflash Explosion Proof products, these must be suitable for the type of cable being used and also meet the requirements of the Ex d flameproof installation standard EN 60079-14.

SAFETY WARNING

If the SL125 is used at high ambient temperatures, ie over +40°C then the cable entry temperature may exceed +70°C and therefore suitable heat resisting cable glands must be used, with a rated service temperature of at least 95°C.

If a high IP (Ingress Protection) rating is required, a suitable sealing washer must be fitted under the cable gland. Any unused cable entry holes must be closed with an Ex d flameproof blanking plug which must be suitably approved for the installation requirements.

The gland accessories below offer a wide selection to cover most Ex environments

Gland and Plug Options			
50200:	M20 E1EX Nickel Plated Brass Gland	50210:	M20 E1EX Stainless Steel Gland
50201:	M20 A2EX Nickel Plated Brass Gland	50211:	M20 A2EX Stainless Steel Gland
50202:	M20 E1EX-QS Nickel Plated Brass Gland	50212:	M20 E1EX-QS Stainless Steel Gland
50203:	M20 A2EX Quick Stop Nickel	50213:	M20 A2EX Quick Stop
50204:	M20 Nickel Plated Brass Stopping Plug	50214:	M20 Stainless Steel Stopping Plug

7.0 Alarm Status, Flash Pattern & Frequency Adjustment (Refer tables 1 & 2)

Flash Pattern/Frequency are set using the **DIP Switches-SW1** (Picture 1) located on the pcb in the top cover of the flameproof enclosure.

LED Beacon: 3 pole.

Xenon Beacon: 2 pole.

Binary code used in the tables: **0 = Off** and **1 = On/(High)**.

Alarm Status: set via remote switching. **Factory Pre-set for Stage 2 Alarm.**

Picture 1 - TYPICAL COVER PCB

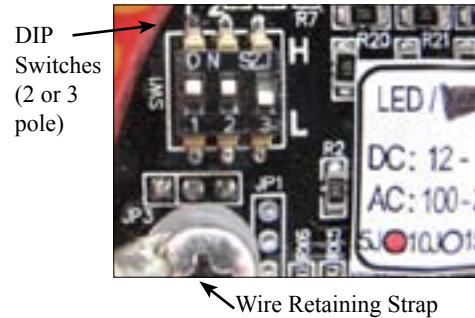


Table 1 - LED Beacon Frequency and Status Selection *Values in () rate when 3rd DIP (1) On*

DIP Switch			S1/S2	S1=OFF S2=OFF	S1=ON S2=OFF	S1=OFF S2=ON	S1=ON S2=ON
1st DIP	2nd DIP	3rd DIP	Alarm Stage 1	Alarm Stage 2	Alarm Stage 3	Alarm Stage 4	
0	0	0(1)	OFF	Flash 60 (75) times/min	Flash 75 (90) times/min	Steady light	
1	0	0(1)	OFF	Rotary 60 (75) times/min	Rotary 75 (90) times/min	Steady light	
0	1	0(1)	OFF	Triple Flash 60 (75) times/min	Triple Flash 75 (90) times/min	Triple Flash 100 (120) times/min	
1	1	0(1)	OFF	Flash & Rotary 60 (75) times/min	Flash & Rotary 75 (90) times/min	Flash & Rotary 100 (120) times/min	

Table 2 - Xenon Beacon Frequency and Status Selection *All values in () are the numbers of flashes per time*

DIP Switch/S1/S2		S1=OFF S2=OFF	S1=ON S2=OFF	S1=OFF S2=ON	S1=ON S2=ON
1st DIP	2nd DIP	Alarm Stage 1	Alarm Stage 2	Alarm Stage 3	Alarm Stage 4
0	0	OFF	60 times/min (1)	90 times/min (1)	120 times/min (1)
1	0	OFF	60 times/min (2)	60 times/min (3)	60 times/min (4)
0	1	OFF	60 times/min (3)	60 times/min (4)	60 times/min (5)
1	1	OFF	60 times/min (4)	60 times/min (5)	60 times/min (6)

3.0 Type Approval Standard

The Moflash Explosion Proof product range all have an EC Type Examination Certificate issued by **Nemko** and have been approved to the following standards:

EN 60079-0:2012 (IEC 60079-0:2011)

EN-60079-1:2007 (IEC 60079-1:2007)

EN 60079-31:2009 (IEC 60079-31:2008)

4.0 Zones, Gas Group, Category and Temperature Classification

The SL125 series products have been certified Ex d IIC T4~T6. This means that the units can be installed in locations with the following conditions:

Area Classification:

Zone 1: Explosive gas air mixture likely to occur in normal operation.

Zone 2: Explosive gas air mixture not likely to occur, and if it does, it will only exist for a short time.

Gas Groupings: Group IIA Propane Group, IIB Ethylene Group and IIC Hydrogen and Acetylene

Zone 21: Explosive dust air mixture likely to occur in normal operation.

Zone 22: Explosive dust air mixture not likely to occur, and if it does, it will only exist for a short time.

Equipment Category: 2GD

Temperature Range: -40°C < Ta < 70°C

5.0 Installation

General Requirement: The product must be installed in accordance with the latest EN60079-0 and EN60079-1 specification or the equivalent IEC specification. Product installation must be carried out in accordance with any local codes that may apply and should only be carried out by a competent electrical engineer.

Location: The location of the unit should be chosen with due regard to the area over which the beacon warning signal must be visible. The unit should only be fixed to services that can support the weight of the unit.

Mounting: The SL125 unit should be mounted on a vertical surface via the stainless steel mounting plate (see diagram 1). The mounting holes are designed to accept M8 Allen Screw only. The use of a stainless steel fasteners is recommended.

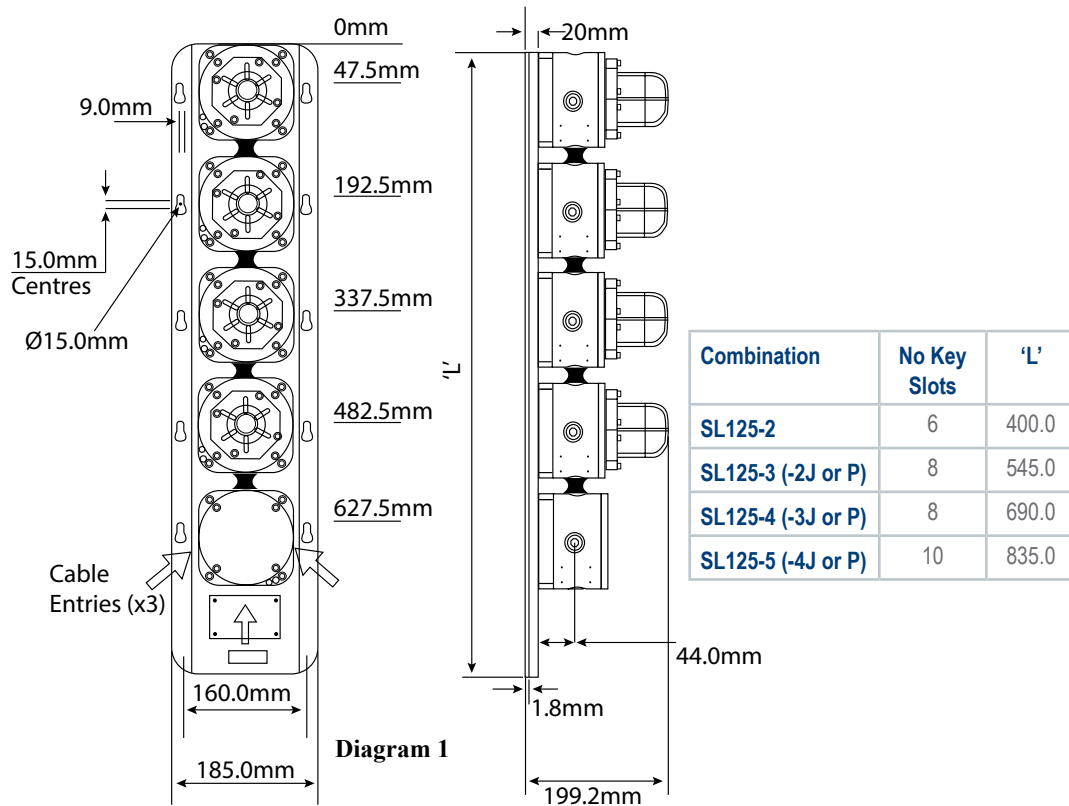


Diagram 1 shows a four way status light with a junction box fitted ie SL1254J - final light specification to suit. Note: A five way combination is the maximum number of units possible on this installation.


6.0 Wiring

General Requirement: Moflash recommends that all cables and cores should be fully identified (suggest using cable from 2.0 to 2.5 mm²). Ensure that all nuts, bolts and screws are secured. Ensure that only the right and certified cable glands are used and earthed correctly. Ensure that only the right and certified stopping plugs are used to blank off unused gland entry points. In order to maintain the IP rating of the product, we recommend SS316 for this application.

Cable Connection: The cable connection is made to terminals located on the pcb of the bottom flameproof enclosure, beacon/junction box or push button. (Typical see diagram 2). Refer to wiring diagram for specific unit combination. Cable connection should be carried out in accordance with relevant technical requirement.

Remove Top Cover

Unscrew the four (4) M5 retained hex socket head screws that retain the beacon/push button or junction box top covers to the enclosures (see diagrams 1 & 2). Twist the cover gently clockwise and anti-clockwise, whilst pulling away from the body, keeping the cover parallel to the body until it comes free. This will allow the cover to hand on its retained strap. Before replacing the cover, check that the flameproof joints are clean and not damaged, the gasket is still retained in its groove.

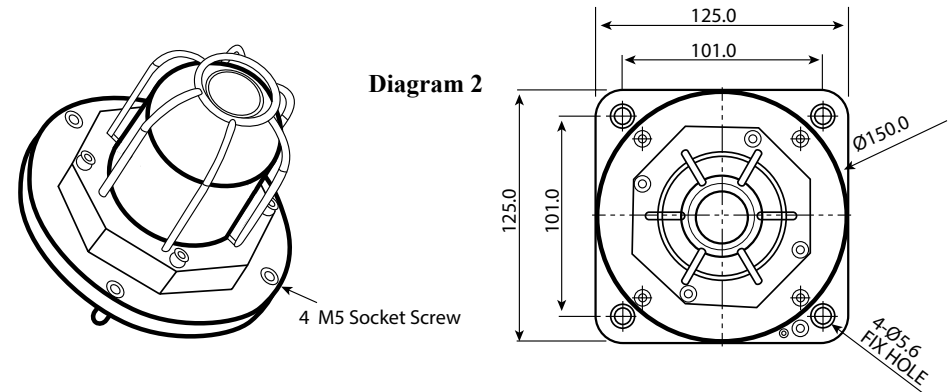

CAUTION: Ensure that the power to the units is isolated before removing the cover.

Apply power to input terminals only.

For **AC units** - connect **Supply** to Customer Terminal PCB marked 'L & N'

For **DC units** - connect **Supply +** to 'L' and '-' (0v) to 'N'

Do not apply power to alarm terminals **S0, S1, S2**.